



How to Setting Wi-Fi

Our IR face recognition access and time attendance terminal supports Wi-Fi. It could be setting as below:

Step1: Press  to enter main menu,

Step2: Select Connection → Wi-Fi




Step3: Turn it on and press search icon 



Step4: Select one SSID and input the WIFI password, and press save button.

Waiting for 5 seconds, you will see the SSID, and 5 second more, Wi-Fi connect succeed.

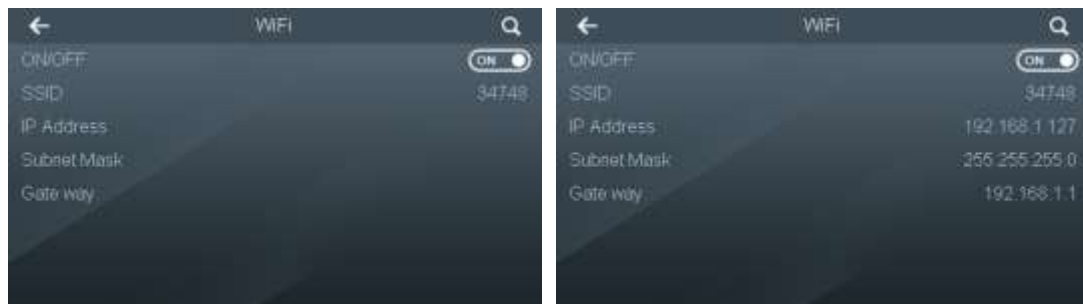

And you can see the WIFI icon in standby page.

