


## How to apply P2P function

P2P function could make remote management very conveniently and how to use and set the P2P function, please refer to below:


How to apply:

Different area branches manage in SmartPSS via P2P, no matter attendance or access control.

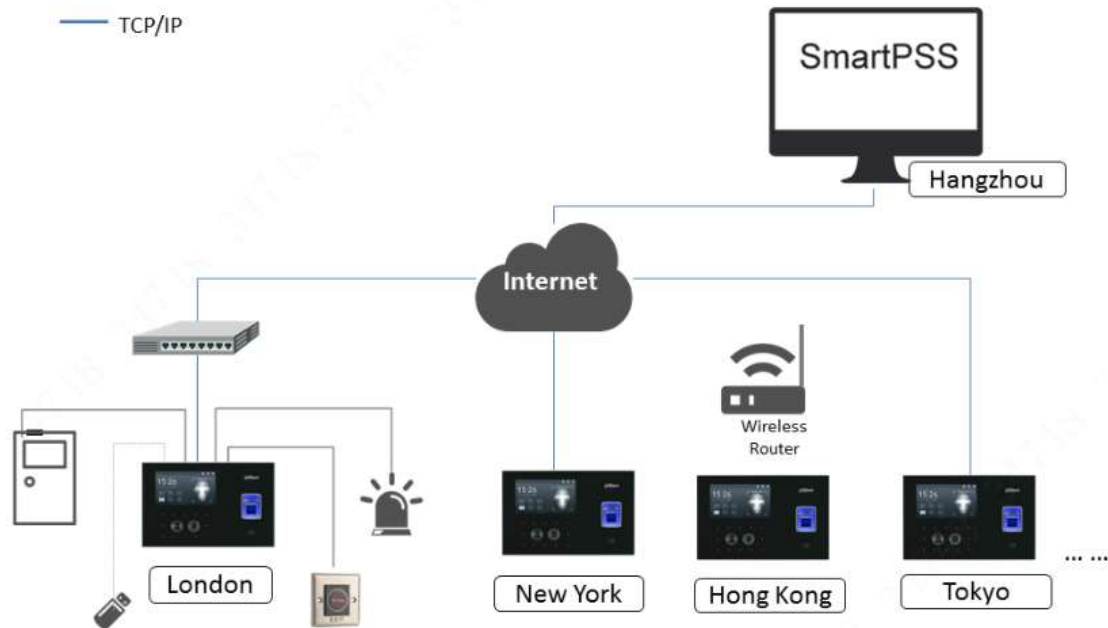


How to Set:



Step 1: Press  to enter main menu

Step 2: Select connection → Network Configuration

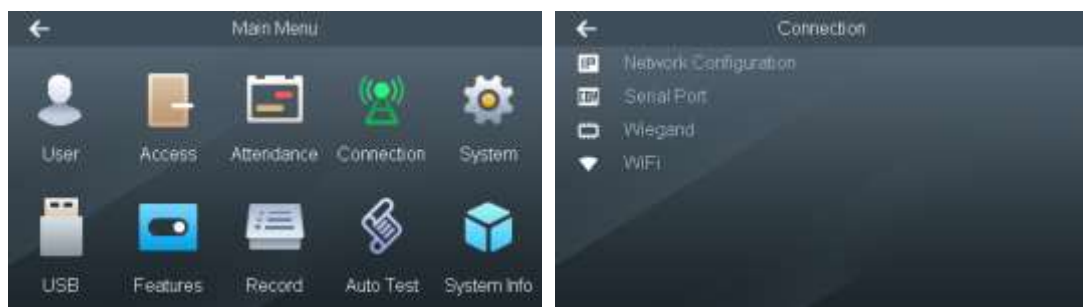

Step3: IP Address → p2p On



Step 4: Open SmartPSS→add in manual—>method to add(P2P)→Input Serial No.(System info—Device version)

Seconds later, you will find the device online, you could send commands to device in Access Module, and download the records from devices

No.	Name	IP Device Name	Device Type	Device Model	Port	Channel Number	Device Status	ID	Operation
1	ASA4214F	4C0130EYAZ54E63	Access Controller	ASA4214F	8080	10000	Online	4C0130EYAZ54E63	[Icons]