

How to User the printer function

1. **Printer Standard:**58mm pos printer:58mm Thermal Receipt Printer, should compatible ESC/POS (ESC—Epson Standard code).

This is the test printer we user: <http://www.rongtatech.com/products-look-43.html>



2. **Firmware:** you can download the firmware from the GDP (or contact our technical supports) firmware in GDP---

ASA4214F---2.6.01.18.00255



ASA6214F---2.6.01.18.00256

文件名称 :	General_ASA6214F_EngSpn_V1.000.114F000.0.T.20180619.zip				
文件版本 :	01 SWR0078270	版本合并日期 :	2018/6/21 2:32:25	发放日期 :	2018/6/21 2:32:25
流程编号 :	SWR0078270	创建人 :	研发中心, 侯鑫 (34285)	创建日期 :	2018/6/21 1:52:54
产品线 :	智能楼宇_门禁			所属区域 :	海外-通用
产品型号 :	DHI-ASA6214F,ASA6214F				
平台接入名称 :					
端到端需求编号 :	ERR180515102-TASK1	商务订单号 :			
测试情况 :	需求程序指定需要T版本				
程序信息 :	对接打印机功能在页面中增加打印机使能、公司名输入、打印机波特率设置、设备ID设置。 打印机在使能时,一旦考勤成功,打印公司名、用户ID、用户名、考勤状态、日期、时间、设备ID等				
程序类型 :	端到端需求				


3. **Configure in device:** After upgrade the firmware ,we should enable the printer function, and select the Select the corresponding.

Menu—Feautres—Printer, you are supports to edit Company Name.


And for Baud Rate, you should know the device Baud Rate. Some device Rate is 9600/19200/115200.

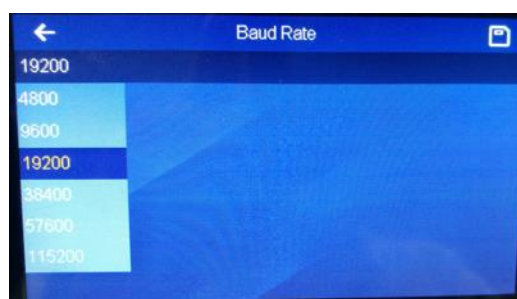
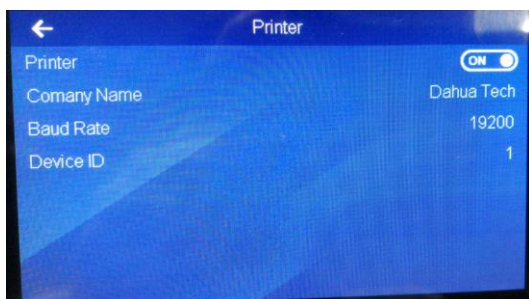


4. connect the RS232 wire.

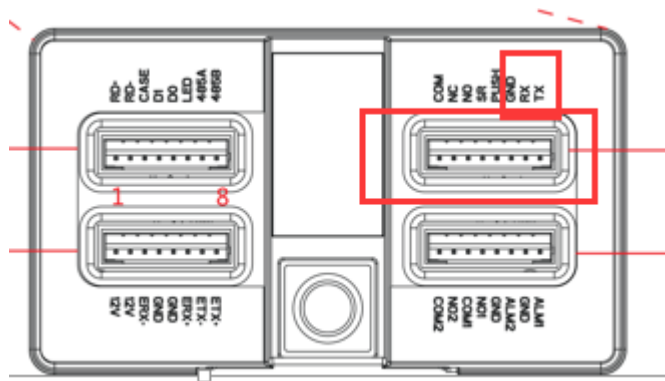

For device, we should connect **GND RX TX** ,as above image showed.

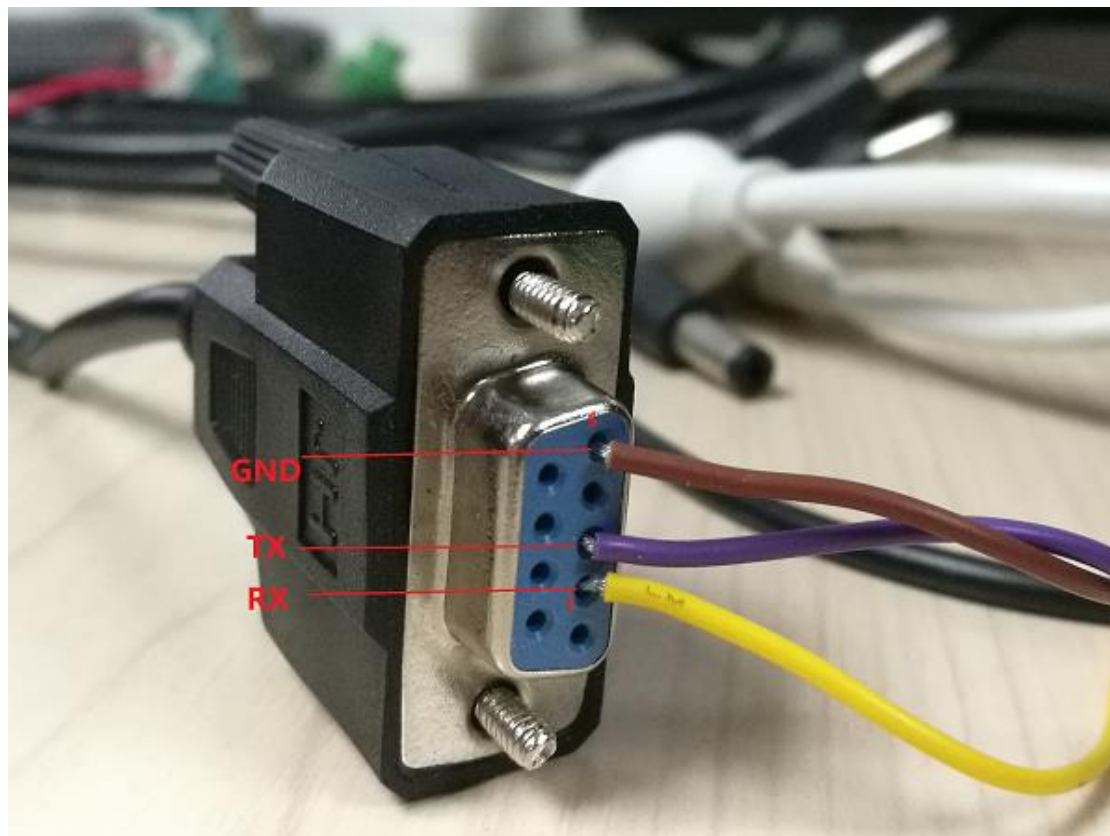

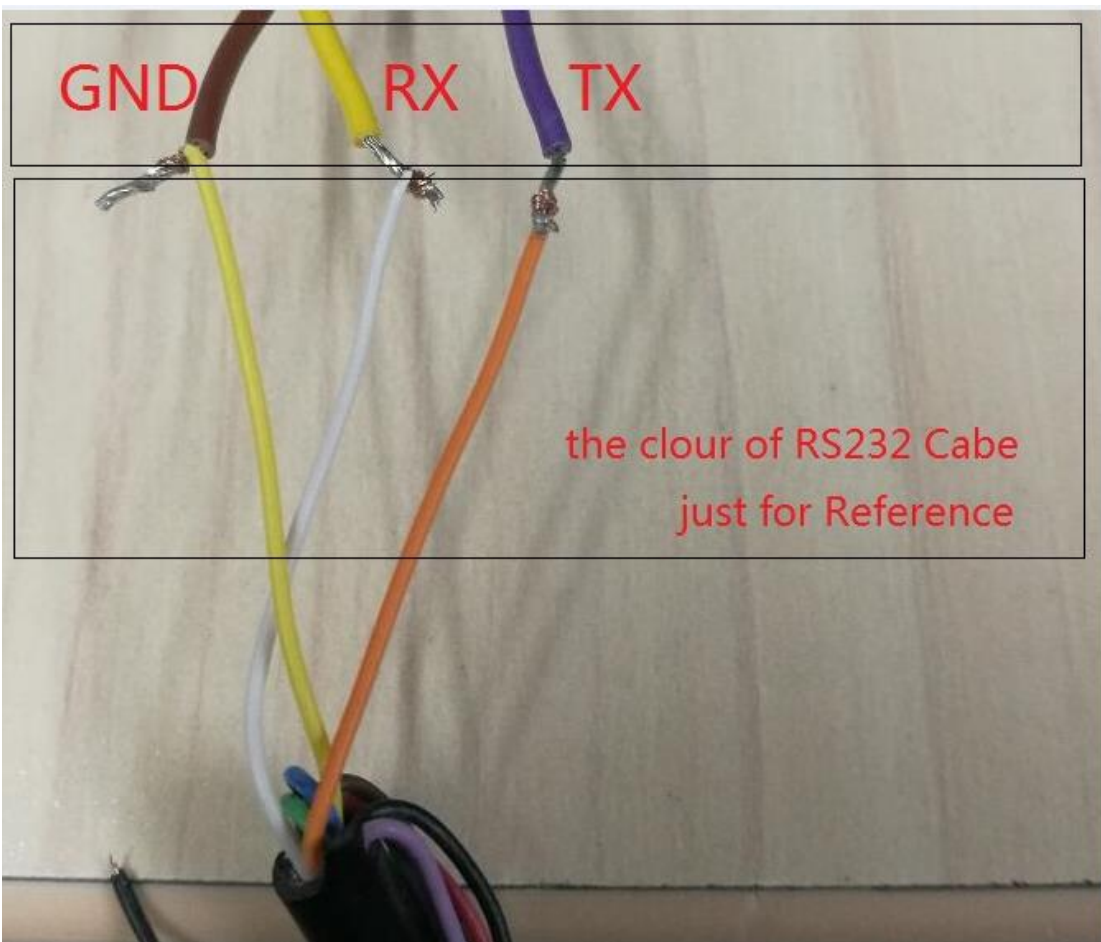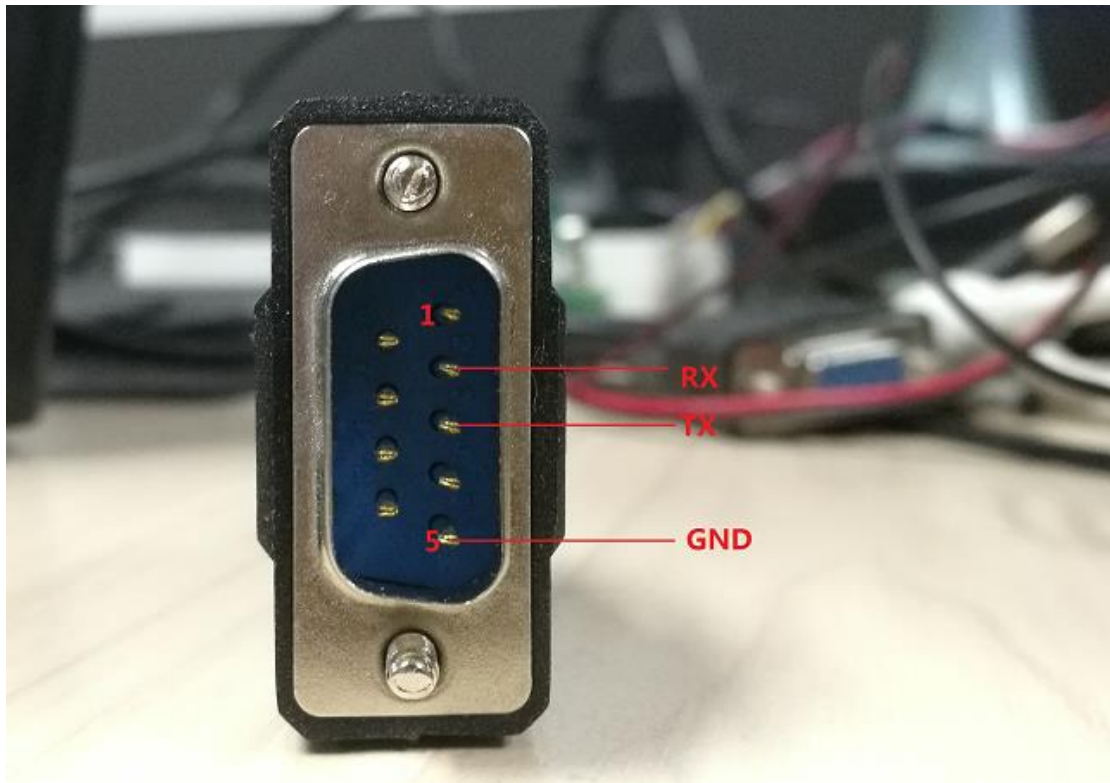

5. When you finish all above steps ,you can get the Attendance Recipe as this .

USER ID: 34748
NAME: JIMMY
DEVICE ID: 1

Dahua Tech

User ID: 34748

Name: Jimmy

Attendance Events:

Break In

Date: 2018/09/12

Time: 14:39:28

Device ID: 1

RONETA 社