

# Fast operation of IP Small Apartment System 2017.8


## Content

<b>1. System structure.....</b>	<b>1</b>
1.1 Overview .....	1
1.2 Demo environment .....	1
1.3 Firmware and software .....	2
<b>2. How to configure modular VTO .....</b>	<b>3</b>
2.1 How to setup the VTO .....	3
2.2 How to setup the VTH .....	5
2.3 Check result.....	6
<b>3. How to use VTO2000A-K .....</b>	<b>7</b>
3.1 How to set password.....	7
3.1.1 How to set Uniform Password.....	7
3.1.2 How to set Self Password .....	8
3.2 How to call room number .....	9
<b>4. How to use VTO2000A-R .....</b>	<b>10</b>
<b>5. How to configure DMSS .....</b>	<b>13</b>
5.1 How to setup the VTO .....	13
5.2 How to setup DMSS.....	13
5.3 Check result.....	14
<b>6. What's the difference between Villa Station and Modularize Villa .....</b>	<b>16</b>

## 1. System structure


This document lists the involved firmware and software, and explains the configuration of IP Small Apartment solution, including the VTO, VTH, Wi-Fi Router and mobile App.

### 1.1 Overview

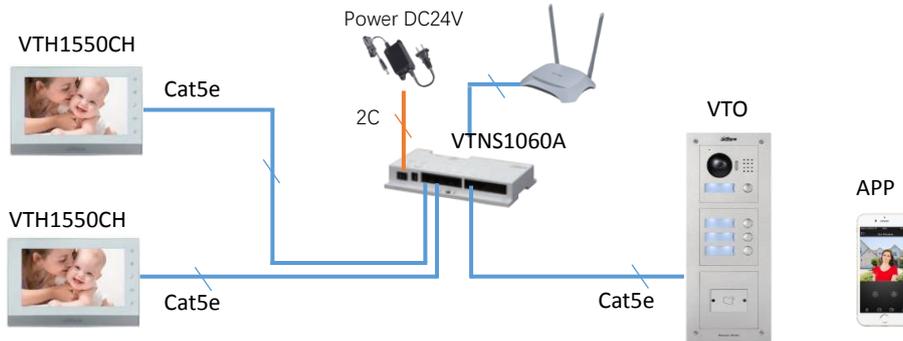

**Note:** VTH1550CH and VTO can be powered by VTNS1060A. Moreover, these devices can be powered individually with 12V/1A if you use other IP switch. **Maximum support for 40 flat.**


### 1.2 Demo environment

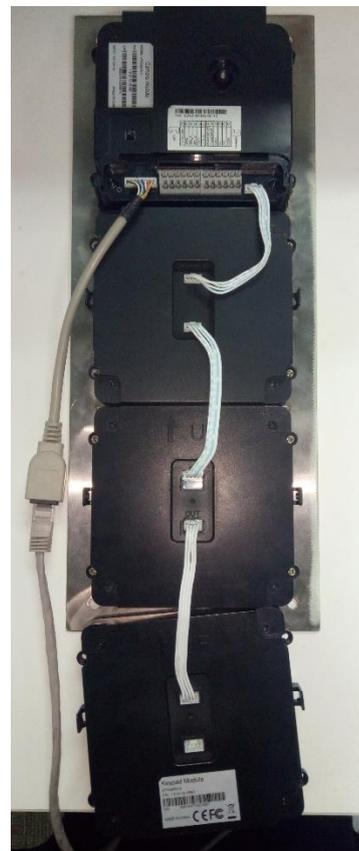


### 1.3 Firmware and software

VTO2000A series	General_VTOXXX_Eng_P_16M_V3.120.0000.0.R.20170803 Device1 IP: 192.168.1.110	VT cybersecurity baseline
VTH1550CH	General_VTH151X_Eng_P_V4.000.0000.0.R.20170803 IP: 192.168.1.109 Room No.9901	VT cybersecurity baseline V4.0 indicates NEW UI
VTO1550CH	General_VTH151X_Eng_P_V4.000.0000.0.R.20170803 IP: 192.168.1.108 Room No.9902	VT cybersecurity baseline V4.0 indicates NEW UI
VTNS1060A		
DMSS	 iOS Version 3.49.001 iDMSS Lite	
IE 11	 Internet Explorer11 Version :11.0.9600.18638	
Chrome	 Google Chrome Version: 60.0.3122.113( 64 bit)	
Windows 7	Windows 7 Enterprise edition	



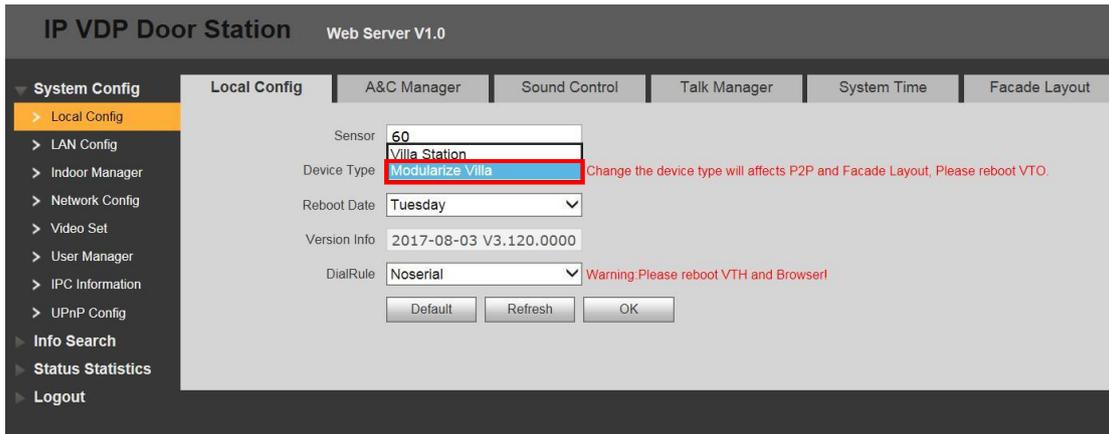


Step 3 Add VTH. System Config -> Indoor Manager, click on 'Add'. Input room number of VTH, such as 9901. The same to add 9902. **Maximum support for 40 Flat.**

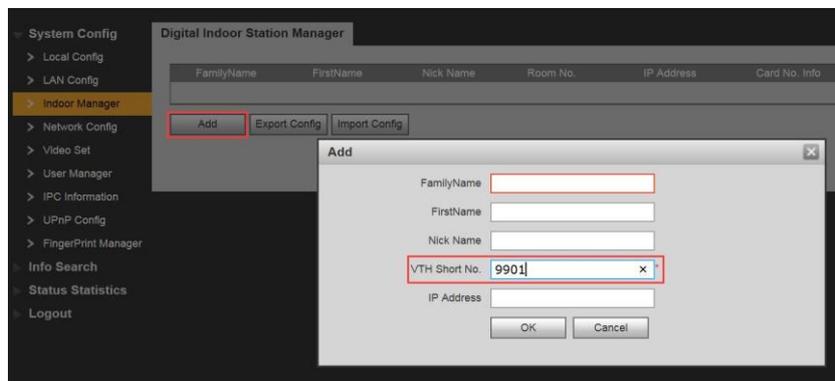

Step 4 Select System Config>Local Config>Facade Layout. Select module according to actual VTO layout. Set corresponding room no. Of three buttons module. Save configure and reboot browser.



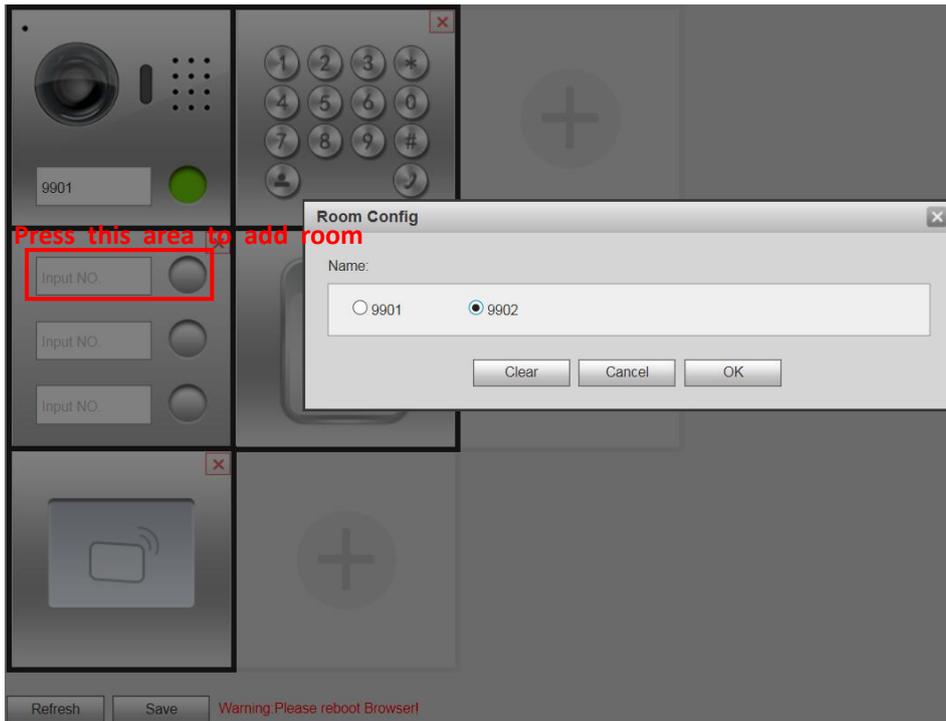


Step 5 Reboot the device.



## 2.2 How to setup the VTH

Add VTO on VTH. Reference: How to configure: 1 VTO + 1 VTH.



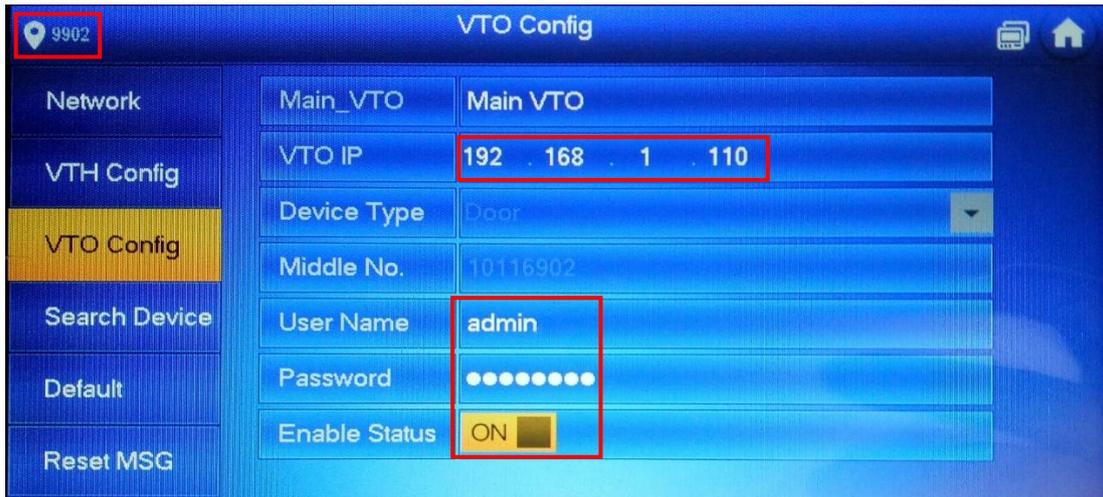


**2.3 Check result**

After the above operation steps, if the top right corner of VTH shows an icon with 'X'



 , means configuration failed. If shows




, it means successfully.



### 3. How to use VTO2000A-K

Select System Config>Local Config>Facade Layout. Make sure you have added VTO2000A-K module.

Note: VTO200A-K can be used to input unlock password and call VTH room number in Modularize Villa. When used in Villa Station, it can only be used to input unlock password.

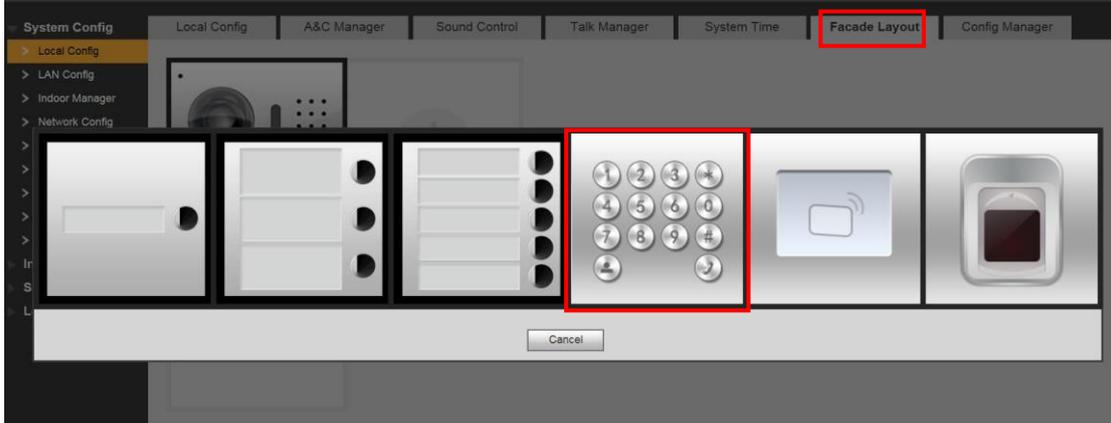


#### 3.1 How to set password

There are two password unlock types, uniform password and self password. The two unlock types **cannot be effective at the same time**, so please select one to take effect.

##### 3.1.1 How to set Uniform Password


Step1 Select System Config >Local Config > A&G Manager. Select Password Type as 'Uniform Password'. Set new unlock password and save it.

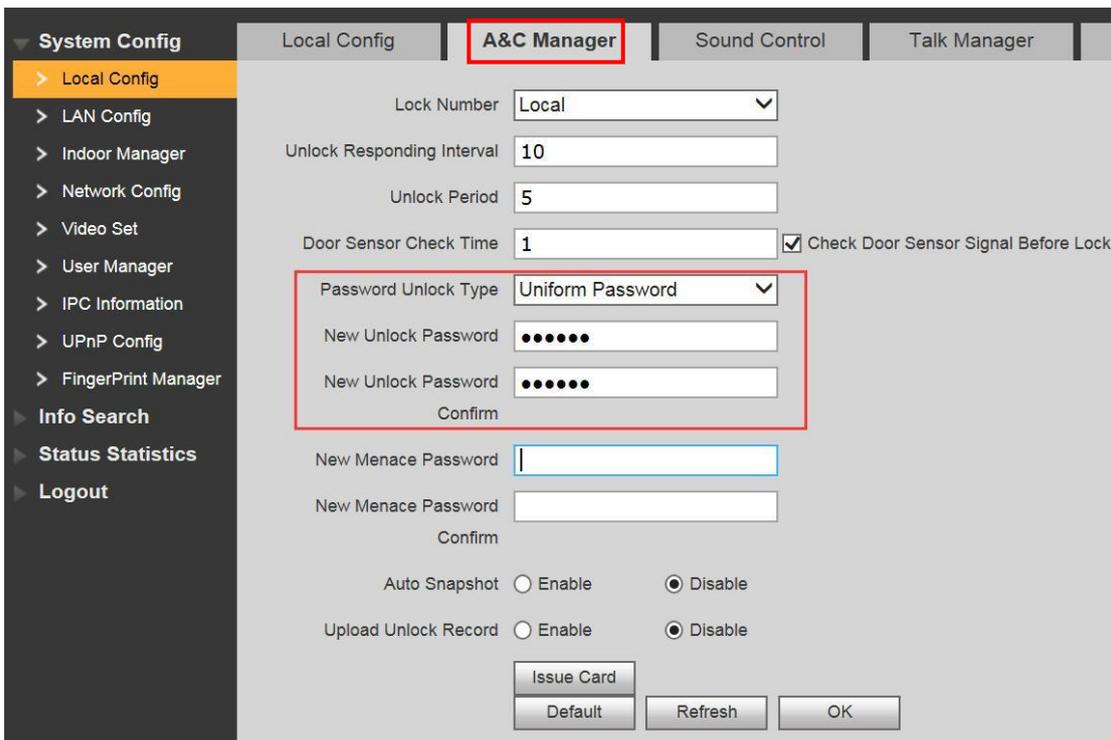


Step2 Input: **#+password+#**, the door will open.

### 3.1.2 How to set Self Password

Step1 Select System Config > Local Config > A&G Manager. Select Password Type as 'Self Password'.

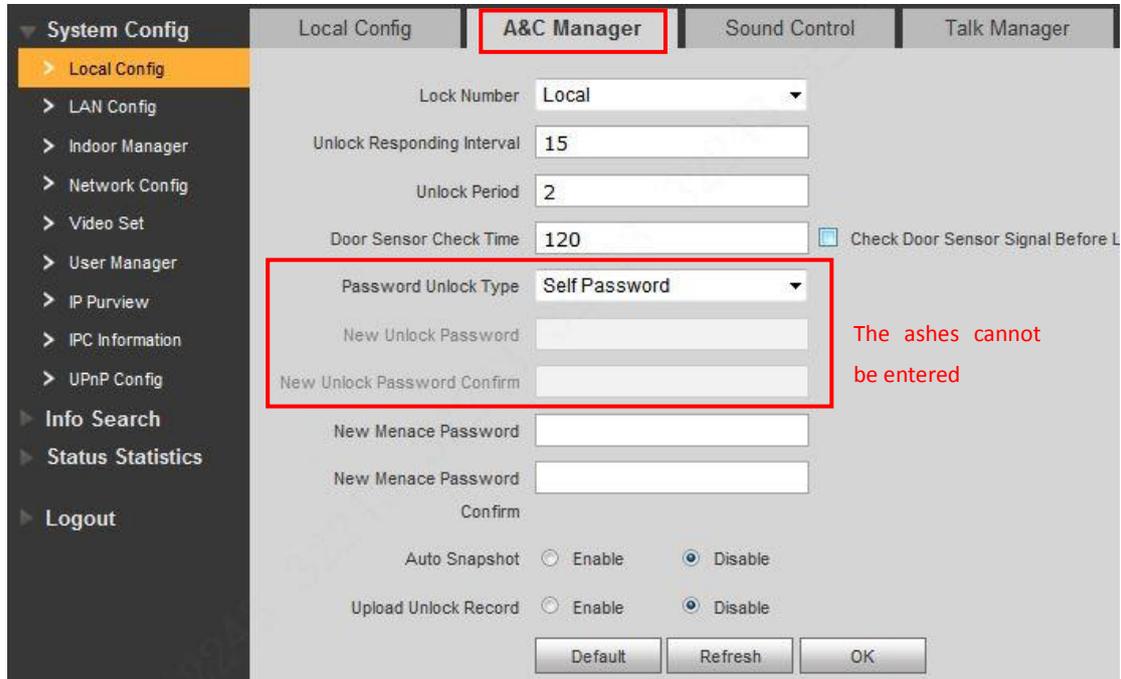

Step2 Set Self Password at your own VTH. So its your self password which is different to others.

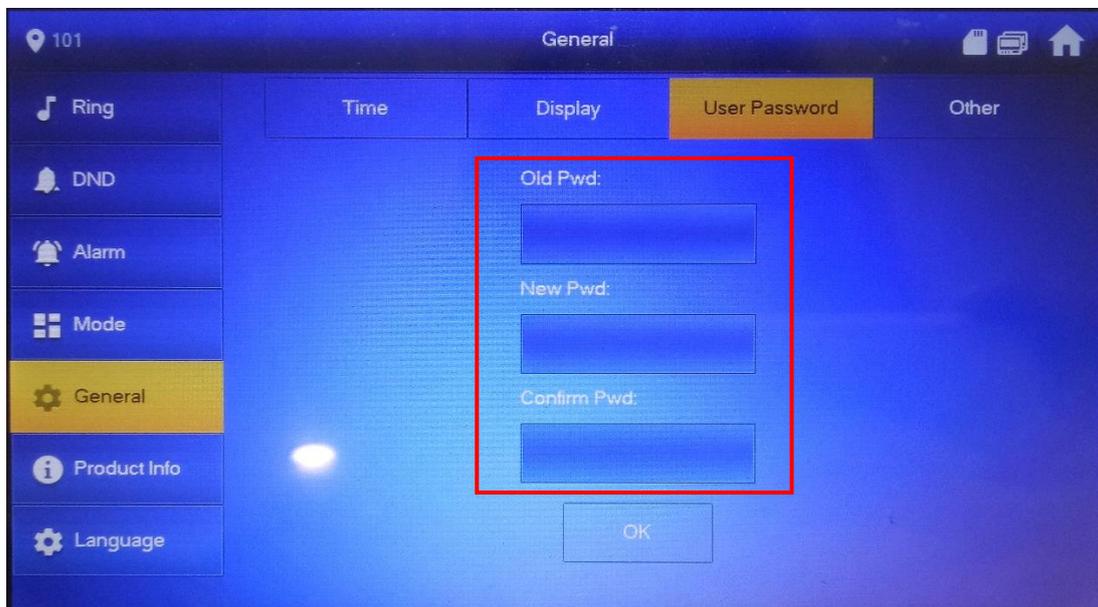

Step3 Input: **#+Room No.+password+#**, the door will open. The room number should be input as 4 digital. For example

1. Room 101, set unlock password as 123456, on the VTO, please input **#0101123456#**
2. Room 9901, set unlock password as 123456, on the VTO, please input **#9901123456#**

### 3.2 How to call room number


**Note:** Only when 'Device Type' is selected as 'Modularize villa' can it be used to enter password and call room number, otherwise it can only input password.

Step: Input room No. + , and there will be a call on VTH.


#### 4. How to use VTO2000A-R


**Note:** Card type: Mifare card(13.56MHz)

Step1 Select System Config>Local Config>Facade Layout. Make sure you have added VTO2000A-R module.

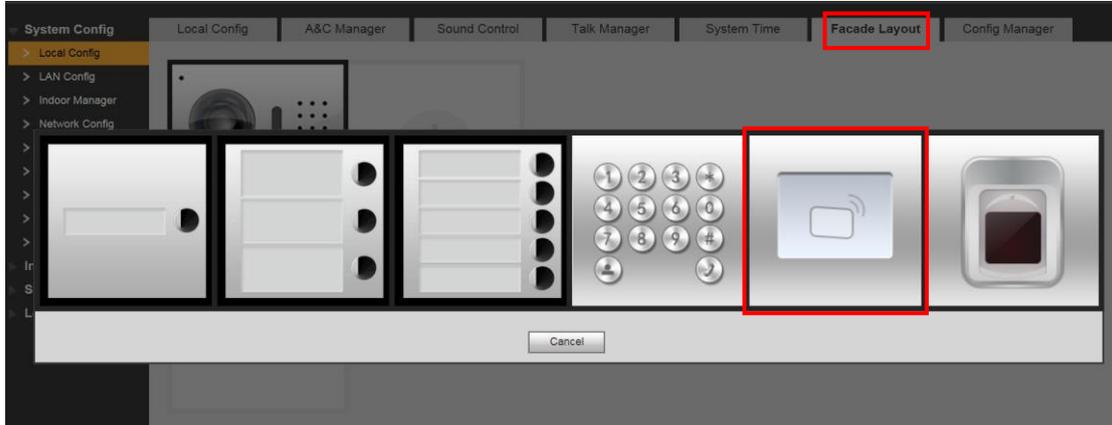

Step2 Select System Config >Local Config > A&G Manager. Issue card, input Room No. and confirm issue.

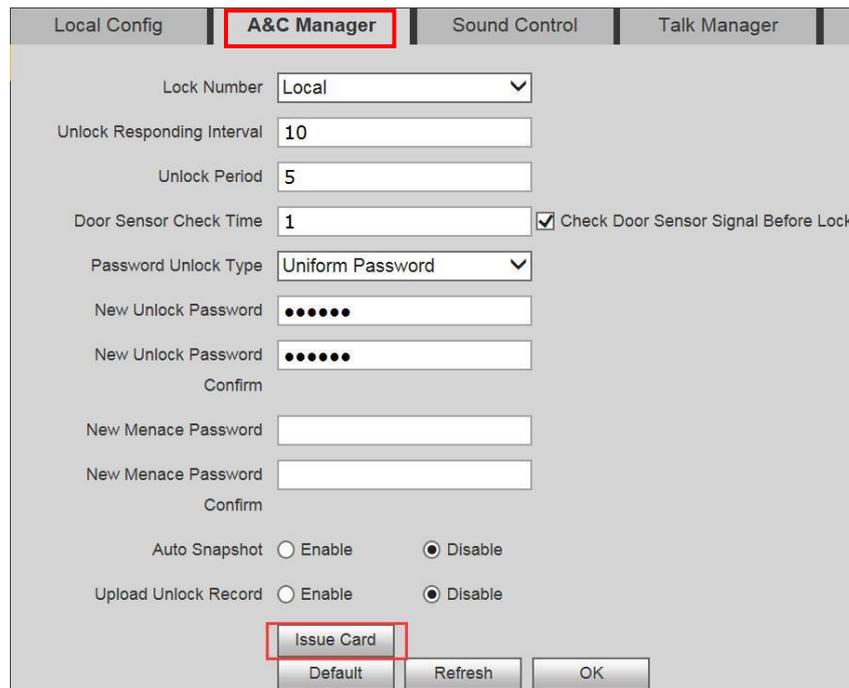

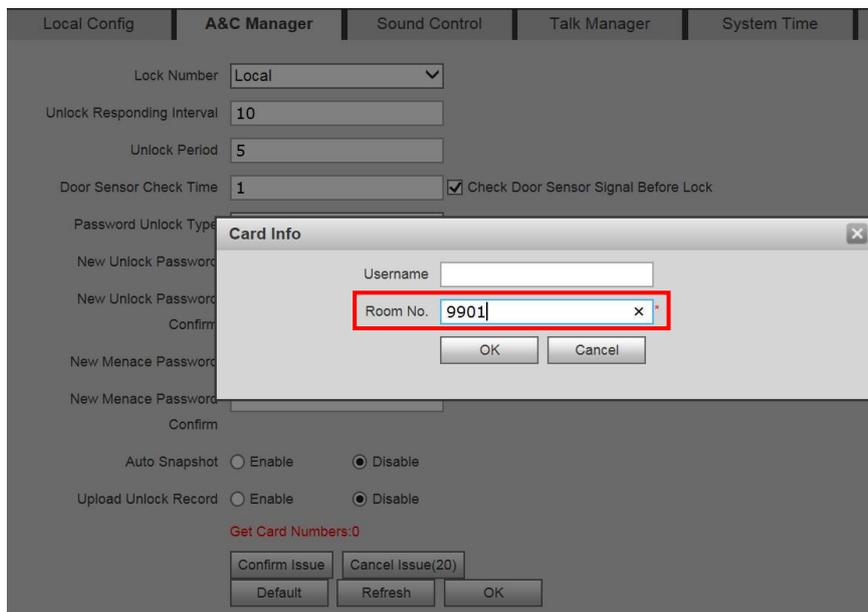

Local Config | **A&C Manager** | Sound Control | Talk Manager

Lock Number: Local

Unlock Responding Interval: 10

Unlock Period: 5

Door Sensor Check Time: 1  Check Door Sensor Signal Before L

Password Unlock Type: Uniform Password

New Unlock Password:

New Unlock Password Confirm:

New Menace Password:

New Menace Password Confirm:

Auto Snapshot:  Enable  Disable

Upload Unlock Record:  Enable  Disable

Get Card Numbers:1 Current Card No.:5A04190A

Confirm Issue Cancel Issue(27)

Default Refresh OK

Step3 You can check Card No. Info in Indoor Manager >Digital Indoor Station Manager.

System Config

- > Local Config
- > LAN Config
- > **Indoor Manager**
- > Network Config
- > Video Set
- > User Manager
- > IP Preview
- > PC Information
- > UHP Config
- > FingerPrint Manager

Digital Indoor Station Manager

FamilyName	FirstName	Nick Name	Room No.	P Address	Card No. Info	QR Code	Modify	Delete
			9902	192.168.1.109				

Add Export Config Import Config

1 / 1 Go to

Card Info


Card ID	Card Number	Username	Main Card	ReportLoss	Modify	Delete
9902	5A04190A		<input type="checkbox"/>			

## 5. How to configure DMSS

### 5.1 How to setup the VTO


Step1 Configure the network. Enable P2P. When connected successfully, status shows "online".

**Note: Device must connect to via WLAN.**

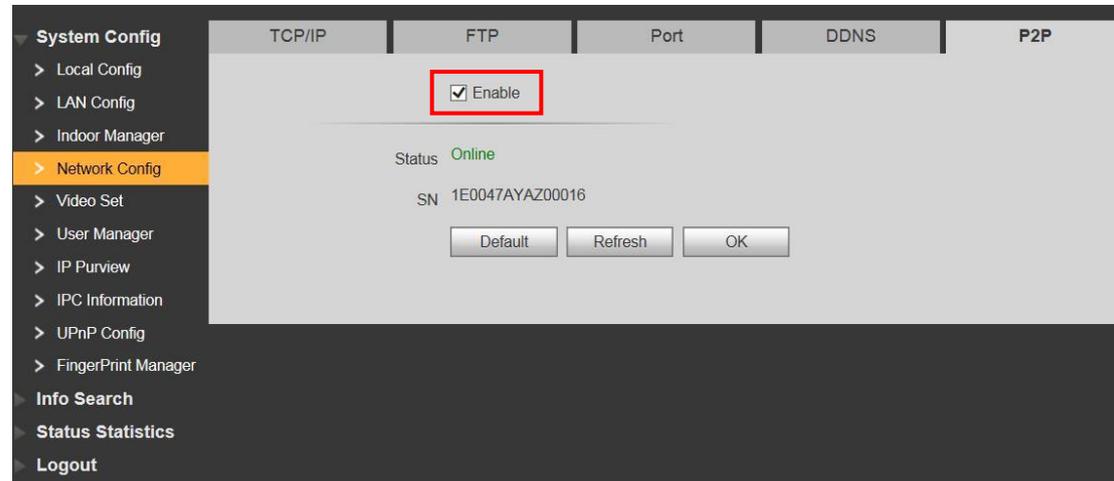

Step2 QR code: Select System Config>Indoor Manager>9901/9902 QR code. Input 'Username and Password' of VTO web. Scan QR code on APP.


Note: Different room has different QR code.

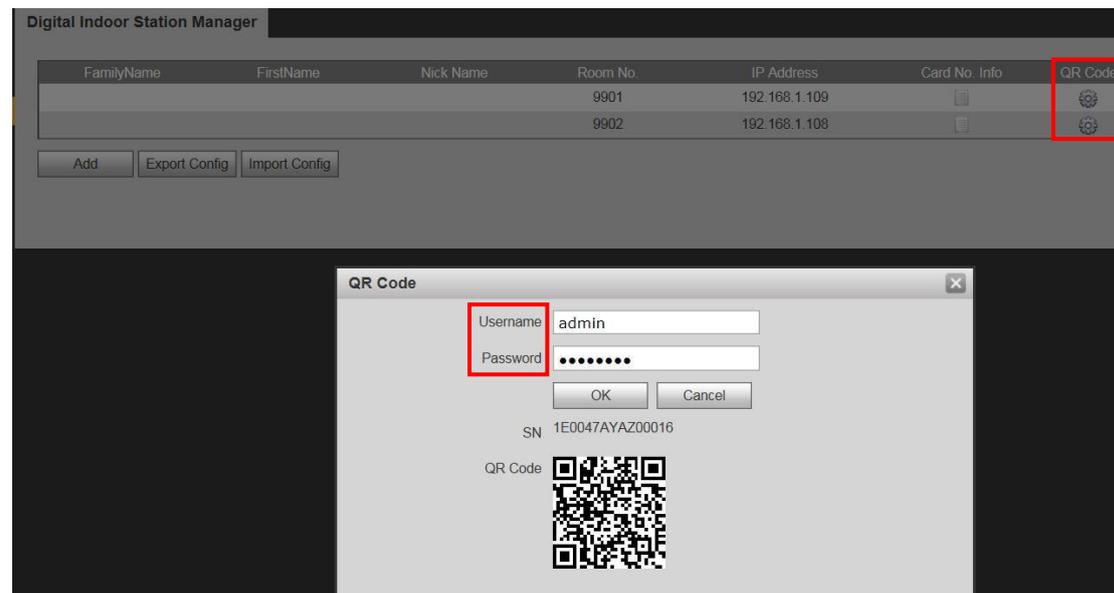

### 5.2 How to setup DMSS

You need to download iDMSS from APP Store/Google play firstly.



Step 1 Add device on mobile phone. Enter add device interface. Press P2P. Enter name, scan QR code of 9901, press Start Preview.

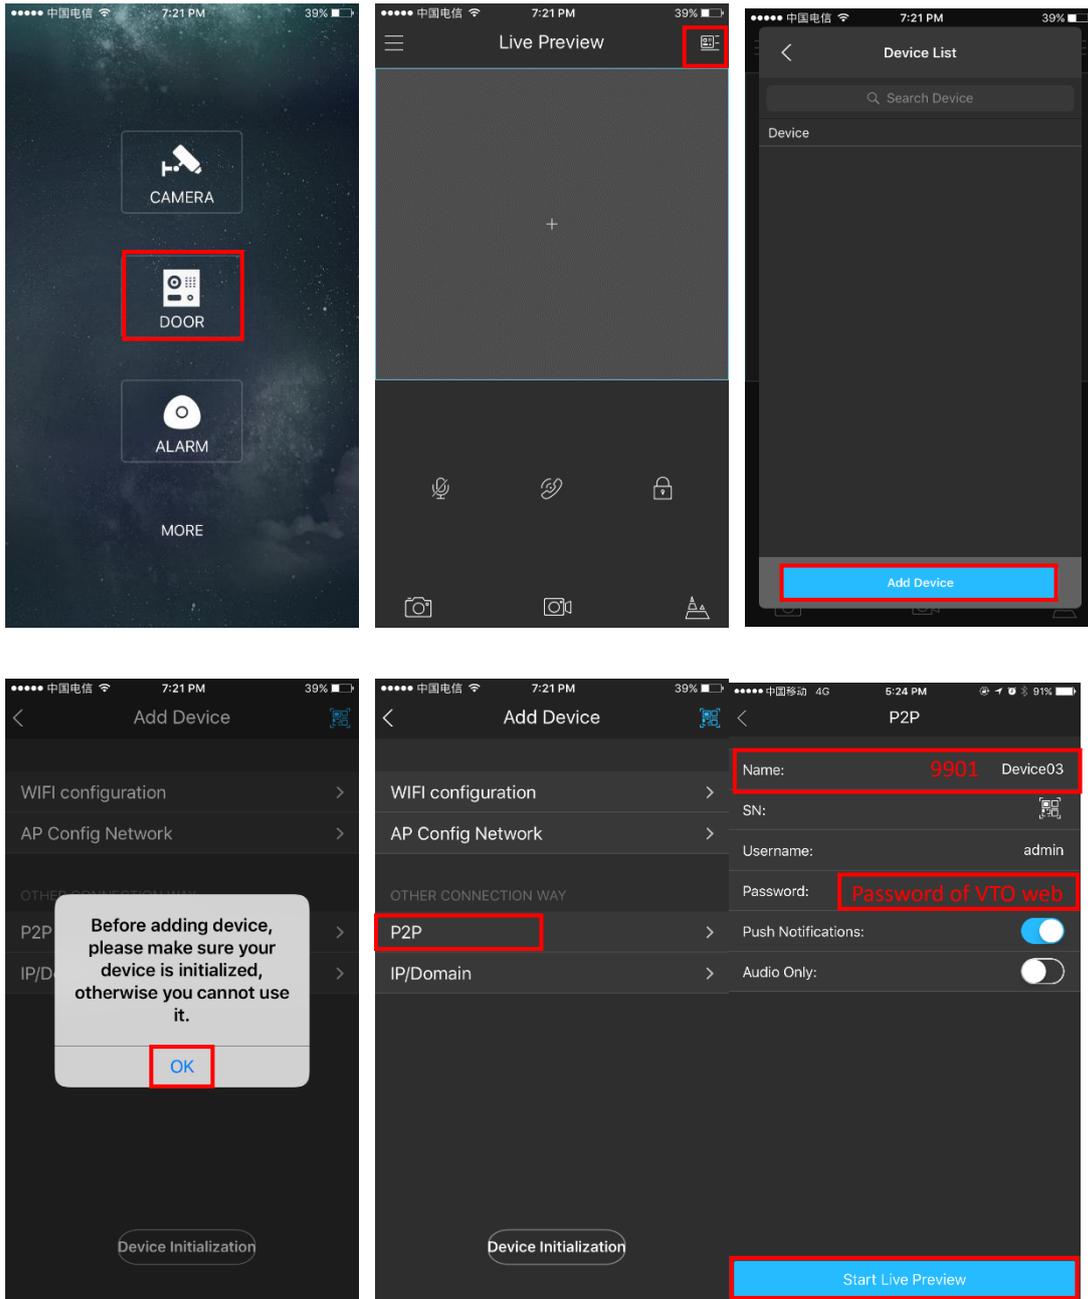

Step 2 Repeat step1 and scan to QR code of 9902 with another mobile phone.


### 5.3 Check result

Press the corresponding button on VTO. There will be a call on your mobile.

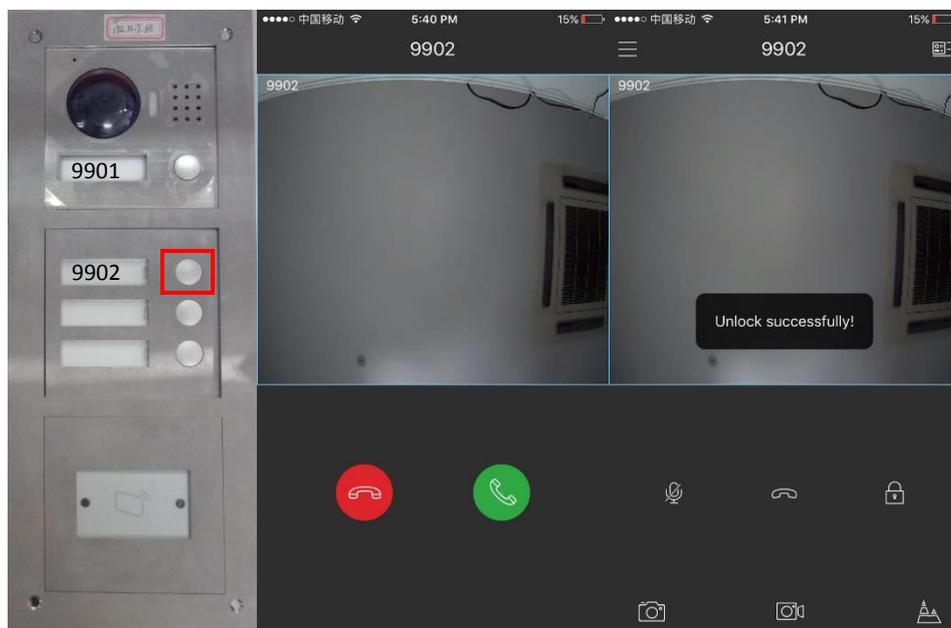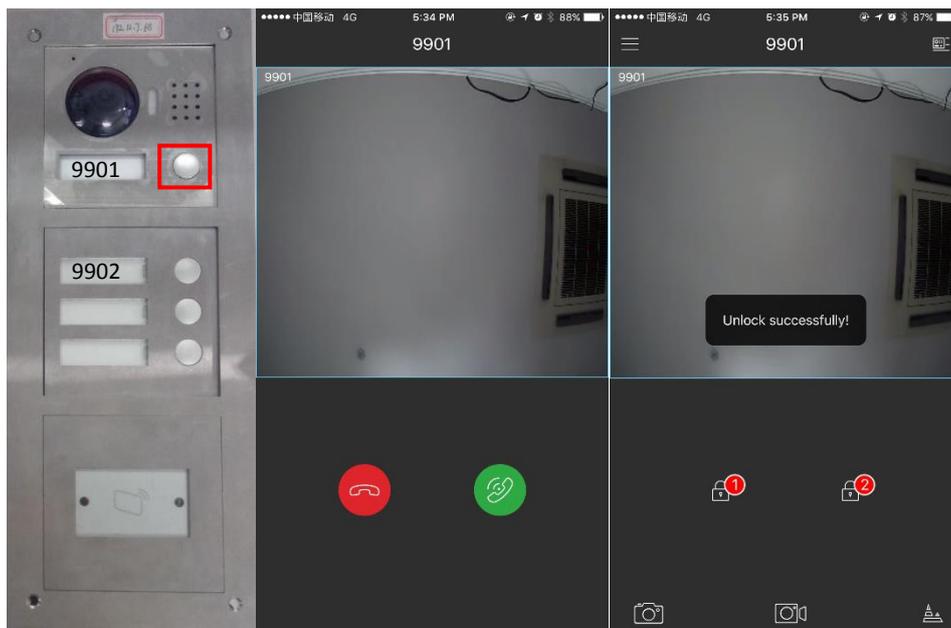


## 6. What's the difference between Villa Station and Modularize Villa


When you choose Device Type as Villa Station, there will be some difference with Modularize Villa.

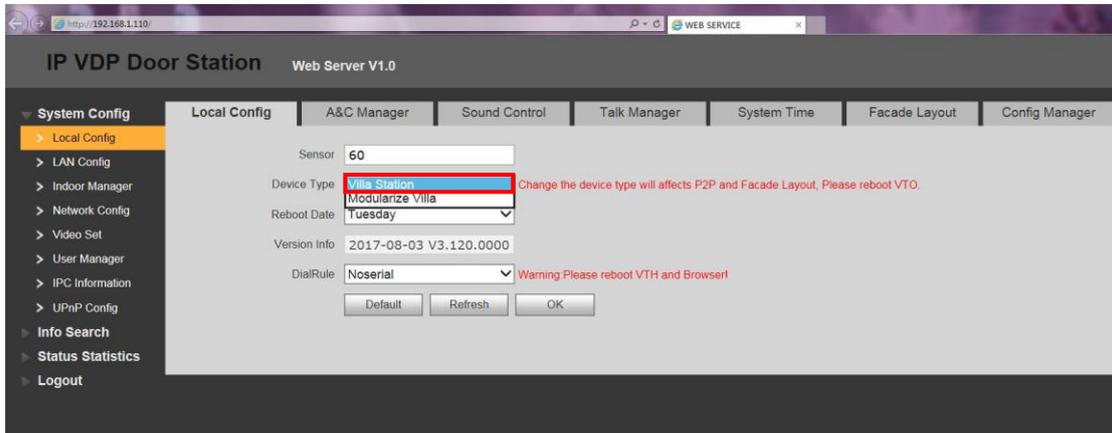

Difference 1 : You can only add one VTH since the device is villa station. But on Modularize Villa, you can add up to 40 VTH on WEB.

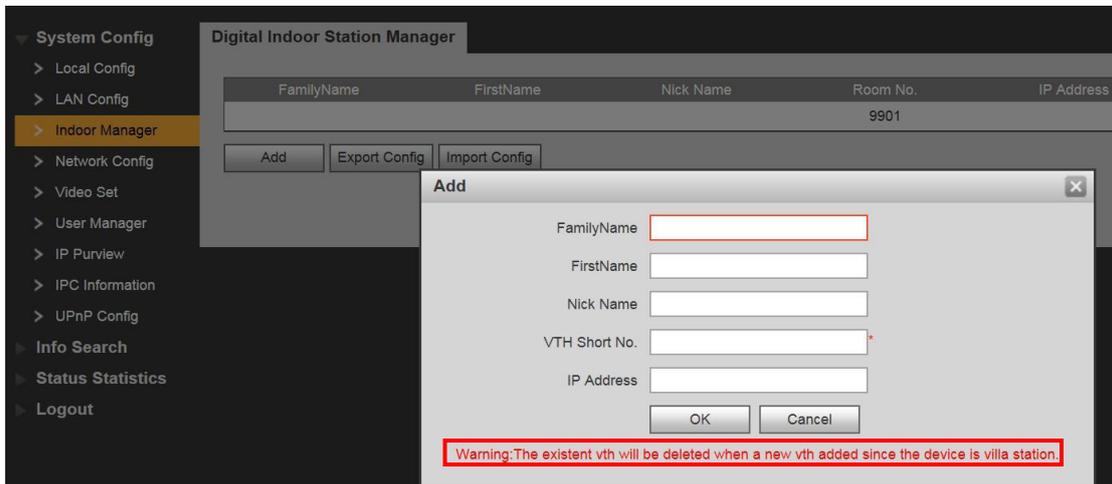

Difference 2 : In Façade Layout, there are three choices for Villa Station, which are used as **door released**. In this case, VTO2000A-K can be used to input password.

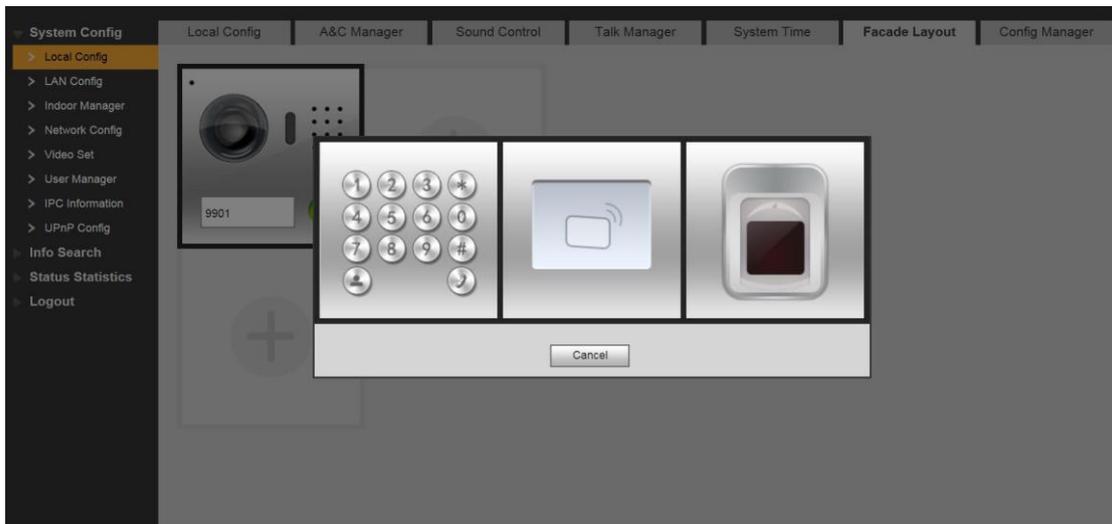

But, you can choose button modules for Modularize Villa, since it has more than one

flat. In this case, VTO2000A-K can be used to input password and call room number.

