

250.00 mm

125.0 mm

87.50 mm

348.00 mm

Tenda

Install Guide

Wireless N300 Universal Range Extender

Model: A9

LED Red
Solid: The device is starting
Blinking Slowly: The device is negotiating with a router/AP
Detecting signal with auto-extending feature (hasn't developed yet)
Blinking quickly: The device is performing WPS negotiation to a router/AP

Green
Solid: Extended successfully, the WiFi signal is strong

Orange
Solid: Extended successfully, the WiFi signal is poor
Blinking: Extended successfully, the WiFi signal is very poor

Button




Use the end of a paper clip or a similar object to press and hold this button for about 8 seconds, and then release it to restore the extender to factory settings.





Press this button and then (within 2 minutes) press WPS button on a router/AP to establish a WPS connection.

Option 1: Use Web Browser to Extender Your WiFi

 
- 1 Plug the extender (A9) into an electrical outlet near your wireless router.
- 2 Use your computer to search and connect to the extender's WiFi. The default WiFi (SSID): Tenda_XXXXXX01 is on the product label on the extender's back panel.
- 3 Launch a web browser, type the default login domain name **re.tenda.cn** or default login IP address: **192.168.0.254** into the address bar, and tap **Enter** on the keyboard.
- 4 Select the WiFi name (SSID) you want to extend, and click **Next**.



  The LED indicator on the extender will be solid red when it is starting, and then starts blinking indicating successful start.

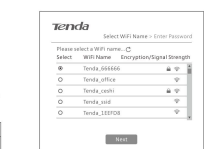


 - 5 Enter the WiFi password of the selected WiFi name (if any), and click **Finish**.
- 6 The device is performing extending process. Wait for a moment.
- 7 Extended successfully.


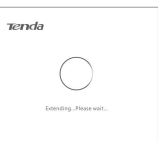


Tips If you don't want to set up the extender's WiFi name and password to the same as those of the selected WiFi name, check the extension button. **Set up the extender's WiFi name and password to the same as those of the Base Station**, customize the extender's WiFi name and password, and then click **Finish**.

 - 8 Relocate the extender to other electrical outlet. Observe the LED indicator on the extender to choose an optimum extended location for best WiFi performance.
- 9 Enjoy your WiFi! The extender's WiFi name and password are the same as those of your router.

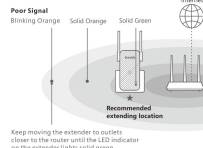

  
Keep moving the extender to outlets closer to the router until the LED indicator on the extender lights solid green.

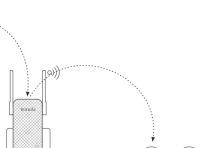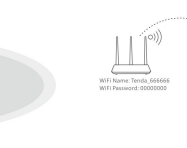

Tips You can also log in to the extender's web UI to check the WiFi signal strength (LED). To do the optimum extending location:
1. Minimize signal interference.
2. Keep the extender away from Bluetooth devices, microwave, refrigerator, etc.


Option 2: Use WPS Button to Extender Your WiFi

 - 1 Plug the extender (A9) into an electrical outlet near your wireless router (with WPS enabled).
- 2 Press the WPS button on your router, and then (within 2 minutes) press the WPS button on the extender.




The LED indicator on the extender will be solid red when it is starting, and then starts blinking indicating successful start.

 - 3 Relocate the extender to other electrical outlet. Observe the LED indicator on the extender to choose an optimum extended location for best WiFi performance.
- 4 Enjoy your WiFi! The extender's WiFi name and password are the same as those of your router.

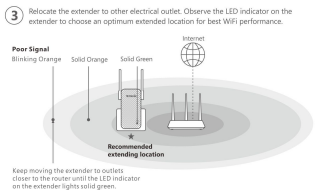

 
Keep moving the extender to outlets closer to the router until the LED indicator on the extender lights solid green.

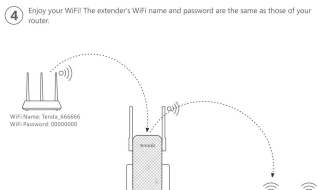

When the LED indicator turns to solid green, it indicates that a successful WPS connection has been established.

Tips 1. You can also log in to the extender's web UI to check the WiFi signal strength (LED). To do the optimum extending location:
2. Keep the extender away from Bluetooth devices, microwave, refrigerator, etc. to minimize signal interference.

 Position the antennas as shown in the figure below for best WiFi performance.

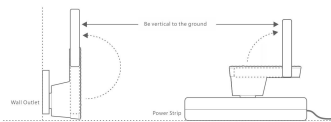

FAQ

Q1: I cannot log in to the extender's User Interface, what should I do?

- A1:**
1. Before extending: Use your computer to connect to the WiFi name (SSID) on the label of the extender's back panel; 2. Launch a web browser, type **192.168.0.254** or **re.tenda.cn** into the address bar and tap **Enter** on the keyboard.

After extending:
1. Use your computer to connect to the extended WiFi name (if you customize the WiFi name of the extender, connect that);
2. Launch a web browser, type **re.tenda.cn** into the address bar and tap **Enter** on the keyboard.

Q2: What should I do if my router has no WPS button?

A2: Follow **Option 1: Use Web Browser to Extend Your WiFi** to set up the extender.



CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

NOTE: (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. (2) To avoid unnecessary radiation interference, it is recommended to use a shielded SW cable.

Declaration of Conformity

Hereby, SHENZHEN TENDA TECHNOLOGY CO., LTD. declares that the radio equipment type A9 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <http://www.tenda.com/en/service/page/ce.html>

Operate Frequency: 2412-2472 MHz EIRP Power(Max.): 19.5 dBm Software Version: V12.01.01.09



FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, you can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.
FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. It is recommended to use a shielded SW cable.



EAC

determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.
FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. It is recommended to use a shielded SW cable.

Technical Support
United States: 1-800-570-5182 Canada: 1-888-998-8866 Hong Kong: 00852-41315198
Tenda: 400-888-8888 Website: <http://www.tenda.com> E-mail: support@tenda.com

Copyright

© 2015 Shenzhen Tenda Technology Co., Ltd. All rights reserved.
Tenda is a registered trademark. Tenda is a registered trademark of Shenzhen Tenda Technology Co., Ltd. Other brand and product names mentioned herein are trademarks or registered trademarks of their respective holders. Specifications are subject to change without notice.

Address: No. 6 Floor, Tower E1, NO.1001, Zhongqiang Road, Nanshan District, Shenzhen, China 518052

Tenda

深圳市吉祥腾达科技有限公司

平面设计图框

图框 比例 1:1 单位:mm

物料名称: A9V1.0-TDE01安装指南

物料编码: 10029739

适用机型: A9

版本号: V1.0

尺寸: 250*348mm; 折后125*87.5mm

材料: 70g书写纸

印刷: 双面单黑

公差: ±1mm

工艺:

耐破:

打样数量:

其它

设计:

校对:

批准:

日期: 2015/5/31