

正面

102.50 mm
410.00 mm

143.5 mm
287.00 mm

1 Connect Your Router

Select Telephone Line/FTH/Cable Access or Ethernet Access according to the type of WAN medium your ISP provided.

A. Telephone Line/FTH (Fiber To The Home)/ Cable Access

B. Ethernet Access

The default WiFi name is Tenda_XXXXXX. There is no default WiFi password.

LED Indicator	Status	Description
SYS	ON	The router is working fine.
WiFi	Solid	WiFi is enabled.
	Blinking	The router is waiting to receive WiFi data.
	Off	WiFi is disabled.
Signal	Solid	The antennas are well connected.
LAN	Solid	The LAN port is transmitting data.
	Off	The LAN is disabled or not connected.
WAN	Solid	The WAN port is well connected.
	Off	The Ethernet cable is connected to the WAN port.
T	Off	For diagnosis.
WPS	Solid	WPS is enabled, or a WPS connection is established.
	Blinking	The router is performing WPS negotiation in a short device of receiving data.
	Off	WPS is disabled.

Substantive

WiFi-RT

Please push the router for about 30 seconds and then release it. LED indicators will light up once after you release 30 seconds. Please push the router for about 30 seconds.

Press and then release it to enable the WPS feature. Within 2 minutes, enable the wireless clients WPS feature is established WPS connection.

Tips

To configure your router, connect your PC to the router wireless or use an Ethernet cable. For the specific steps of pluging in the WiFi, please refer to Appendix 2 on Your WiFi. The wireless LAN mode is IEEE 802.11n, IEEE 802.11g and IEEE 802.11b. The wireless LAN mode is IEEE 802.11n, IEEE 802.11g and IEEE 802.11b. The wireless LAN mode is IEEE 802.11n, IEEE 802.11g and IEEE 802.11b.

2. Connect to the wireless router WiFi mode with the new WiFi password if you change them.

2 Configure Your Router

1. Click a web browser, such as IE, and type 192.168.0.1 in the address bar, and tap Enter on the keyboard. The screen below will appear. Tap the OK button to proceed to the Password box, and click OK.

2. Select a connection type and configure it according to the features and instructions in the list on the right.

Internet Connection Type	Features	Instructions
PPPoE	Select PPPoE, if you need dial up with username and password to access the Internet without using a router.	Select PPPoE, type the PPPoE Username and Password provided by ISP, customize a security key to secure your wireless network, and click OK.
DHCP	Select DHCP, if you access the Internet as soon as you plug the Ethernet cable into your computer.	Select DHCP, customize a security key to secure your wireless network, and click OK.

Appendix 1 Join in Your WiFi

Windows 7

Mac

Install Guide

iPhone/iPad

1. Scroll screen to find the Settings icon.

2. Click the icon.

3. Click here to open Wi-Fi.

4. Enter a security key.

5. Connected successfully.

Windows 8

1. Click the icon on the bottom right corner of your desktop.

2. Select your wireless network from the list, click Connect and then follow onscreen instructions.

3. Connected successfully.

Appendix 2 Configure Your PC

Windows 7

1. Click the icon on the bottom right corner of your desktop.

2. Click Properties.

3. Select Obtain an IP address automatically and Obtain DNS server address automatically.

4. Click OK on the Local Area Connection Properties window.

MAC

Click on the Apple icon from the top left corner and select System Preferences.

1. Click Network.

2. Click Using DHCP.

3. Click Apply.

FAQs

Q1: Where should I place my wireless router for optimum performance?

A1: The optimum performance, place your device:

- near the center of the area where your computers, smart phones and other devices operate, and preferably within line of sight to your wireless devices;
- In an elevated location such as a high shelf, keeping the number of walls and ceilings to a minimum between the router and other devices such as computers and smart phones;
- Away from electrical devices that are potential sources of interference, such as ceiling fans, home security systems, or microwaves;
- Away from any large metal surfaces, such as a solid metal door or aluminum studs;
- Away from other materials such as glass, insulated walls, tin tanks, mirrors, brick, and concrete that can also affect your wireless signal.

Q2: I cannot log in to the wireless router's login page. What should I do?

A2: Please do as the following one by one until you solve your problem:

- Verify the Ethernet cables between your PC and the router is intact and well-connected. If not, change another Ethernet cable;
- Change your browser, or change another browser;
- Double check the TCP/IP settings on your PC. Verify that it is set to obtain an IP automatically. For details, see Appendix 2 Configure Your PC from;
- Close and hold the WPS/RSZ button for about 8 seconds and then release it to reset the router to factory default settings. Then try logging in to again;
- Try accessing the Web Manager from another PC, smart phone or iPad.

Q3: I forgot my WiFi password (security key), what should I do?

A3: Please do as the following one by one until you solve your problem:

- Log in to the wireless router's Web Manager and you can see the WiFi password in the Home page;
- Restore the wireless router to factory default settings, and reset the WiFi password.

Restore Method: Press and hold the WPS/RSZ button for about 8 seconds and then release it.

CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

NOTE: (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. (2) To avoid unnecessary radio interference, it is recommended to use a shielded RJ45 cable.

FC Mark Warning

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If you experience any radio or TV interference, you are encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment.

Reduction Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

NOTE: (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. (2) To avoid unnecessary radio interference, it is recommended to use a shielded RJ45 cable.

风琴四折页

物料名称:	F3V1.0-TDE01安装指南	尺寸:	展开410*287mm;折后102.5*143.5mm	工艺:	风琴四折
物料编码:	10026528	材料:	70g书写纸	耐破:	
适用机型:	F3V1.0-TDE01	印刷:	单黑	打样数量:	
版本号:	V1.0	公差:	±1mm	其它:	

设计: _____ 校对: _____ 批准: _____ 日期: 2015/4/24